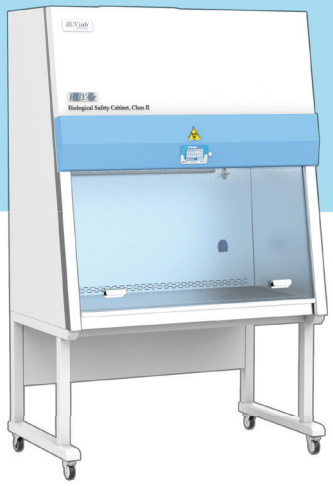

BIOSAFETY CABINET CLASS II, TYPE A1

HUYAir Bio2 A1 Prime

- Complies with EN 12469, NSF 49, ISO 14644 standards
- Integrated microprocessor controller with 4.3-inch touch screen
- DC motor
- Warranty: 3 years

Dear customers,

We sincerely thank you for your trust and choice of our products. To ensure that the Biosafety cabinet class II, type A1 - **HUYAir Bio2 A1 Prime** operates safely, effectively and durably, please read the user manual carefully before operating. This manual will provide all the necessary information on the installation, operation and maintenance of the equipment, helping you to maximize the performance of the cabinet and ensure safety during use. In addition, we also provide the electrical circuit diagram of the equipment and accompanying technical parameters to support you in using, maintaining and repairing the equipment effectively.

PRODUCTS DELIVERED WILL INCLUDE

- 01 Biosafety cabinet class II, type A1 – **HUYAir Bio2 A1 Prime**
- 01 UV light
- 03 LED lights
- 02 Velocity sensors - USA
- HEPA filters (H14) – Camfil/AAF
- 02 Electrical sockets
- EBMpapst fan – Germany
- Power cord
- User manual
- Certificate of Quality (CQ)
- Warranty card

Here are some important safety instructions:

- Protective Equipment: Always wear goggles, gloves and protective clothing when using the cabinet to protect yourself.

- Equipment Check: Before use, ensure the cabinet and accessories are not damaged and are properly installed.

- Place the cabinet in the correct position: Place the cabinet on a flat and stable surface to avoid tipping or moving during operation.

- Use the appropriate power source: Connect the cabinet to the power source according to the manufacturer's instructions.

- Avoid direct contact: Do not place hands or any body part into moving parts of the cabinet while it is in operation.

- Turn off the cabinet when not in use: Disconnect the power supply when the cabinet is not in use to ensure safety.

- Professional Repair: Only trained and qualified personnel should repair the device.

Compliance with these safety instructions not only helps protect the user but also ensures that the Biosafety cabinet class II, type A1 - **HUYAir Bio2 A1 Prime** operates stably and effectively throughout its lifetime.

We sincerely thank you and hope you will be satisfied with the **HUYAir Bio2 A1 Prime** product!

1. BIOSAFETY CABINET CLASS II, TYPE A1 – HUYAir Bio2 A1 Prime

1.1. PURPOSE OF USE

The Biosafety cabinet class II, type A1 – **HUYAir Bio2 A1 Prime** is designed to protect users, specimens, and the environment during operations. It is commonly used in microbiology, medical, pharmaceutical, and biotechnology research laboratories, where a high level of safety is required when handling potentially pathogenic agents.

1.2. SOME OUTSTANDING FEATURES AND CHARACTERISTICS

The **HUYAir Bio2 A1 Prime** biosafety cabinet features a microprocessor controller and a 4.3-inch touch screen, providing precise monitoring and adjustment of operational parameters. The cabinet is equipped with an integrated airflow sensor with a wind alert mode that activates when the airflow speed falls outside the set range, ensuring stable performance and optimal protection for the user.

The cabinet's warning system is highly comprehensive. When the filter and UV lamp need replacement, the system automatically alerts the user. Notably, the UV lamp and motor will automatically turn off when the fluorescent light is on or when the door is opened, protecting the user from UV exposure. The door alarm system also activates when the glass door is opened beyond 200 mm, with both audible and visual signals to ensure optimal safety.

The **HUYAir Bio2 A1 Prime** cabinet utilizes DC motor and an EBMpapst centrifugal fan motor from Germany, renowned for its energy-saving capabilities, noise reduction, and extended filter lifespan. When the glass door is fully closed, the motor automatically reduces power to 30% to conserve energy while maintaining clean air within the workspace. The premium HEPA filters from Camfil (Sweden) or AAF (USA) with 99.999% efficiency at 0.3 µm ensure optimal filtration performance.

The cabinet's design includes double walls and internal pressure to completely prevent and isolate hazardous air. Special ventilation grids at the front and sides provide optimal protection for both the user and the products. The cabinet's exterior is made of 1.2 mm thick galvanized steel with chemical-resistant powder coating, the interior chamber is made of 0.8 mm thick SUS 304 stainless steel, and the UV-blocking tempered glass door, 5-10 mm thick, features a counterweight design, making it easy to raise and lower the door. Notably, the cabinet is designed with tempered glass side panels, allowing easy observation of samples and operator activities.

The cabinet is tilted at a 10° angle for easier operation. Additionally, it features access ports for accessories such as gas, water, and air valves, as well as an online particle counting sample port.

1.3. AIR FLOW SYSTEM

Hệ thống dòng khí của **HUYAir Bio2 A1 Prime** hoạt động bằng cách hút không khí xung quanh qua khe phía trước và hai bên hông vách, tạo thành dòng khí hút vào. Lưu lượng dòng khí này được chia thành hai phần: 30% sẽ được lọc qua bộ lọc thải và thoát ra ngoài, trong khi 70% còn lại sẽ được phân bổ đều trên bề mặt bộ lọc HEPA cấp, tạo thành dòng khí thẳng đứng đi xuống, đảm bảo môi trường làm việc sạch và an toàn.

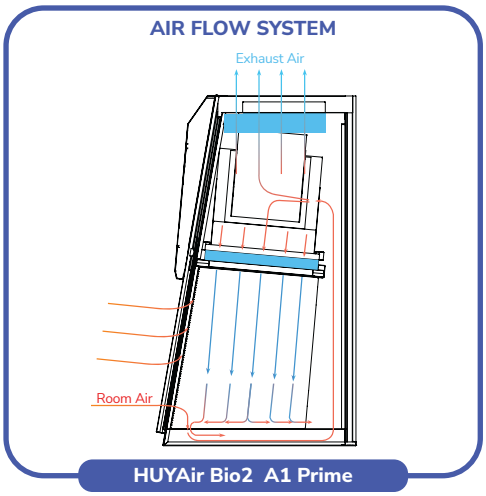

1.4. SPECIFICATIONS

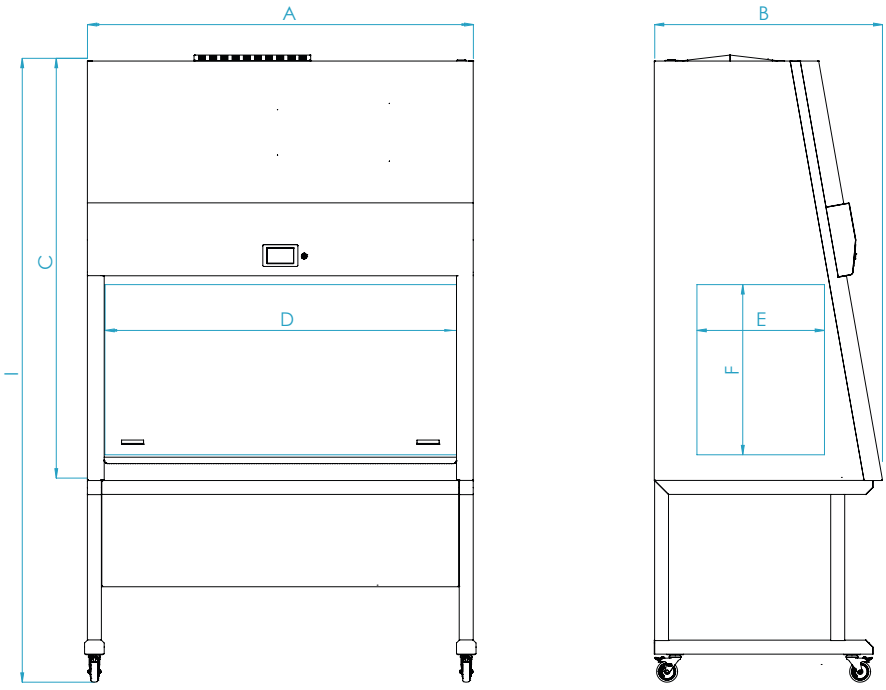

Model	HUYAir Bio2 – 1200 A1 Prime	HUYAir Bio2 – 1500 A1 Prime	HUYAir Bio2 – 1800 A1 Prime
Control	Microprocessor with 4.3 – inch touch display		
Downflow velocity	0.35 m/s		
Inflow velocity	0.38 m/s		
Brightness	>750 lux		
Noise level	<65 dB		
Maximum door opening height	541.7mm		
Motor	DC		
External dimensions (WxDxH)	1380 x 810 x 1500 mm	1680 x 810 x 1500 mm	1980 x 810 x 1500 mm
Internal dimensions (WxDxH)	1260 x 600 x 640 mm	1560 x 600 x 640 mm	1860 x 600 x 640 mm
External dimensions with support stand	1400 x 810 x 2220 mm	1680 x 810 x 2220 mm	1980 x 810 x 2220 mm
Voltage – Frequenciens	200 – 240V, 50/60 Hz		

2. OPERATING INSTRUCTIONS

2.1. INSTALLATION INSTRUCTIONS BEFORE OPERATION

Installation location: Place the **HUYAir Bio2 A1 Prime** on a flat and stable surface to ensure it does not sag. Avoid placing the cabinet in humid environments or narrow corners to ensure the space is suitable for the size and requirements of the device. The cabinet should be placed in a closed room, away from walkways, doors, windows, and away from fans, vents or other air handling equipment.

Installation environment: HUYAir Bio2 A1 Prime should be placed in a laboratory with stable environmental conditions, with a temperature of 5-40°C and a maximum humidity of 80% non-condensing. Ensure the work area is clean and safe for optimal operation of the device.

Check the power source: Use 200 - 240V/50-60Hz power source to supply the cabinet. The power source must be stable. In case the power source is unstable, consider using a voltage stabilizer to protect the cabinet.

2.2. EQUIPMENT OPERATING INSTRUCTIONS

Step 1: Connect the power cord and supply power to the device, turn on the power switch next to the screen. After the cabinet starts up, the main screen interface will appear.

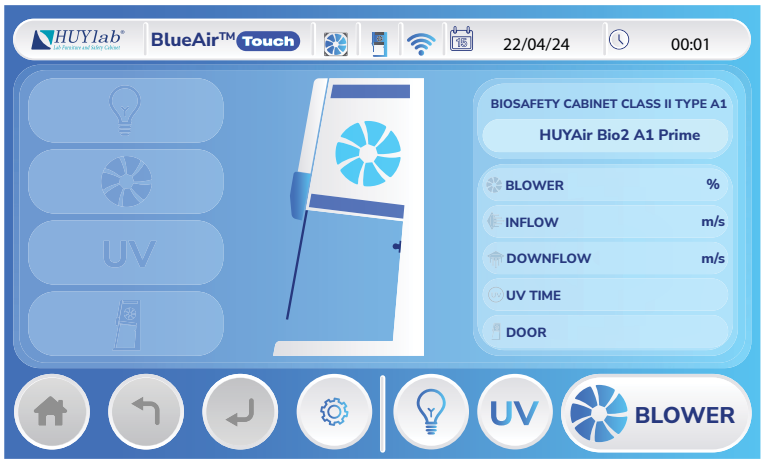

Step 2: Close/open the glass door

The opening/closing of the glass door is done manually, the opening/closing status of the door is displayed on the screen as follows:


The door is in the closed state.


The door is open


The door is not
in the right position

Door status display area

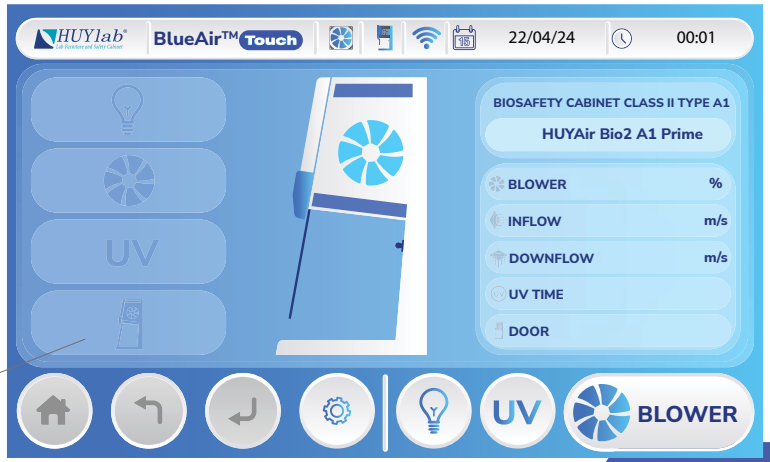

Step 3: Turn the fan on/off

Press the "BLOWER" button on the main screen to turn on/off the fan, the fan operating status is displayed as follows:

The fan is on

The fan is off

Note

- When the door is opened, the fan will operate at the set level.
- When the door is closed, the fan operation level is reduced by 30% from the set level and automatically turns off 1 minute after the door is closed.

Step 4: Turn the UV light on and off

Press the "UV" button on the main screen to turn on/off the UV light, the working status of the UV light is displayed as follows:

UV light is off

Note

- The UV light is only on when the cabinet door is closed.
- When the UV light is on, other devices (fan, LED) will be turned off.
- If the UV lamp runs out of the set time or the cabinet door is opened unexpectedly, the system will automatically turn off the UV lamp and restore the status of other devices to the state before the UV lamp was turned on.

Step 5: Turn on/off the LED light

Press the button on the main screen to turn on/off the LED light, the working status of the light is displayed as follows:

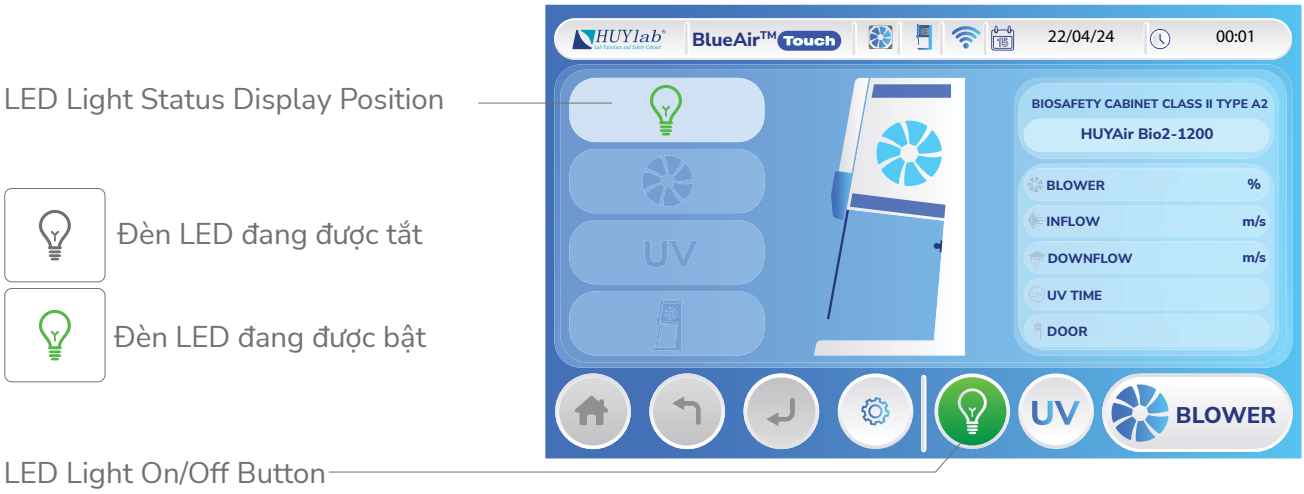

2.3. SYSTEM INSTALLATION INSTRUCTIONS

On the main screen interface, press the SETTING button to enter the system settings interface.

2.3.1. FAN LEVEL SETTING

Step 1: In the system setting interface, press **"BLOWER",** then the device password and press "ENTER" to enter the fan level setting page.

Step 2: On the fan settings page, press the **"EDIT"** button and enter the desired fan

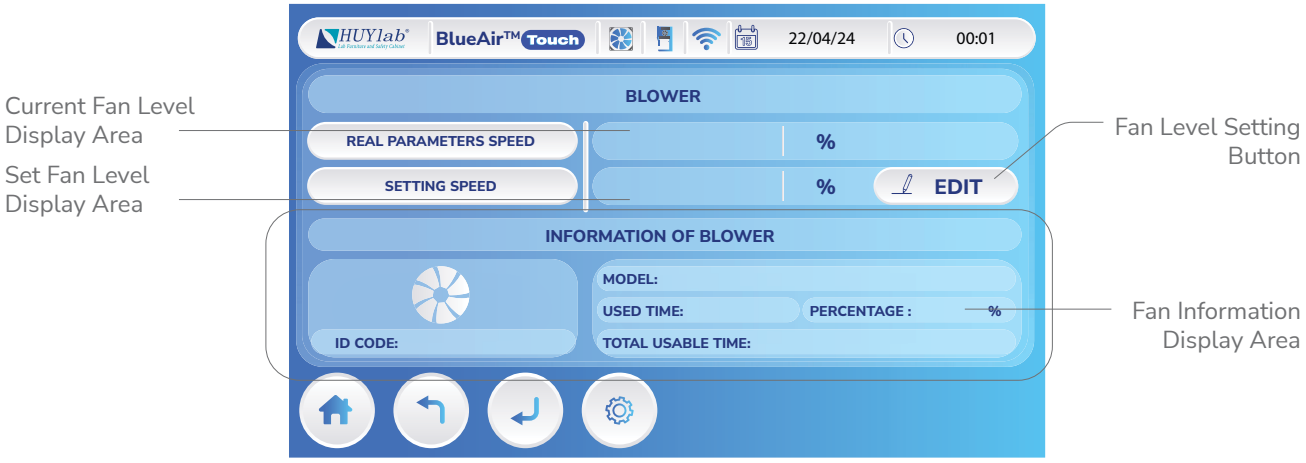

Step 3: Press "ENTER" ↵ to confirm or "BACK" ↩ to cancel and exit.

2.3.2. SETTING THE OPERATING TIME OF THE UV LAMP

Step 1: In the system settings interface, click " UV " to enter the UV light on/off time setting page

Step 2: On the fan setting page, press the "EDIT" buttons and enter the desired UV lamp start time and end time.

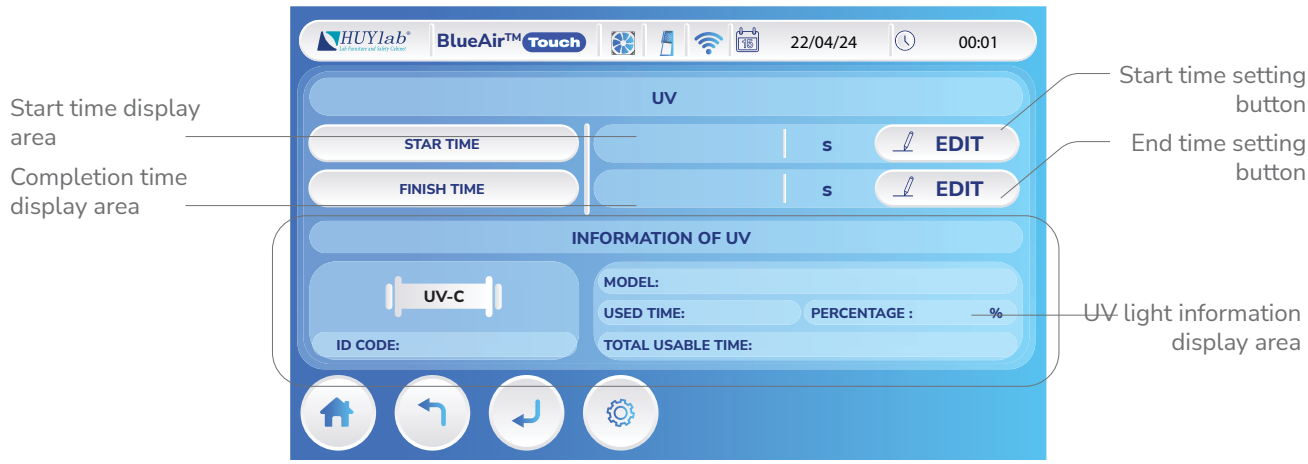

Step 3: Press "ENTER" ↵ to confirm or "BACK" ↩ to cancel and exit.

2.3.3. SETTING WARNING THRESHOLD FOR WIND SPEED SENSOR

Step 1: In the system settings interface, press **"VELOCITY"** to enter the wind speed sensor settings page.

Step 2: On the sensor setting page, press the **"SET"** buttons to select the settings for the inlet/outlet wind speed sensor.

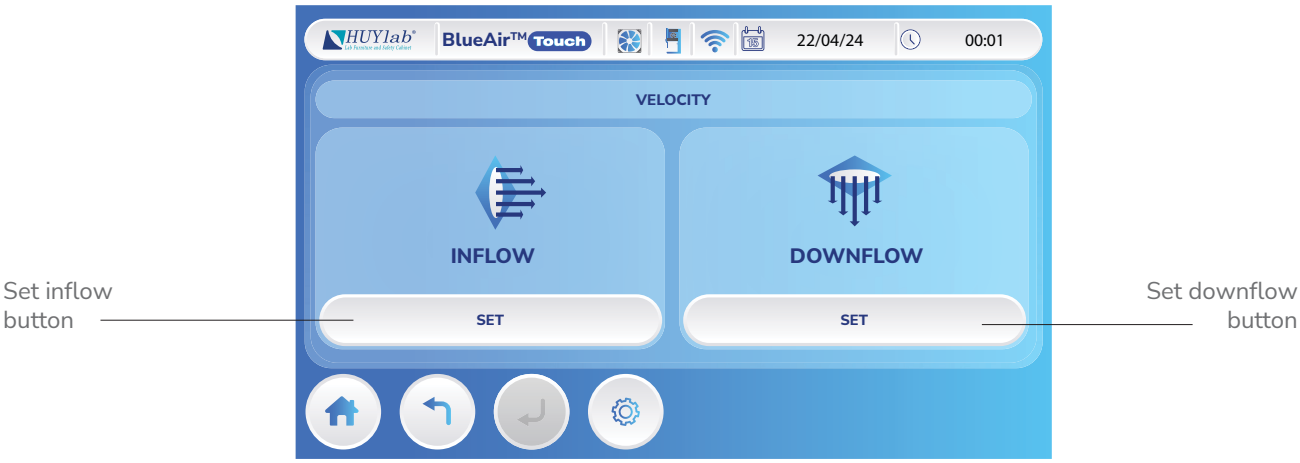

Step 3: Set up the wind speed sensor:

- In the inlet/outlet wind speed sensor setting page, press **"EDIT"** and enter the min, max values to set the threshold for the sensor.
- Press **"ENTER"** to confirm or **"BACK"** to cancel and exit.

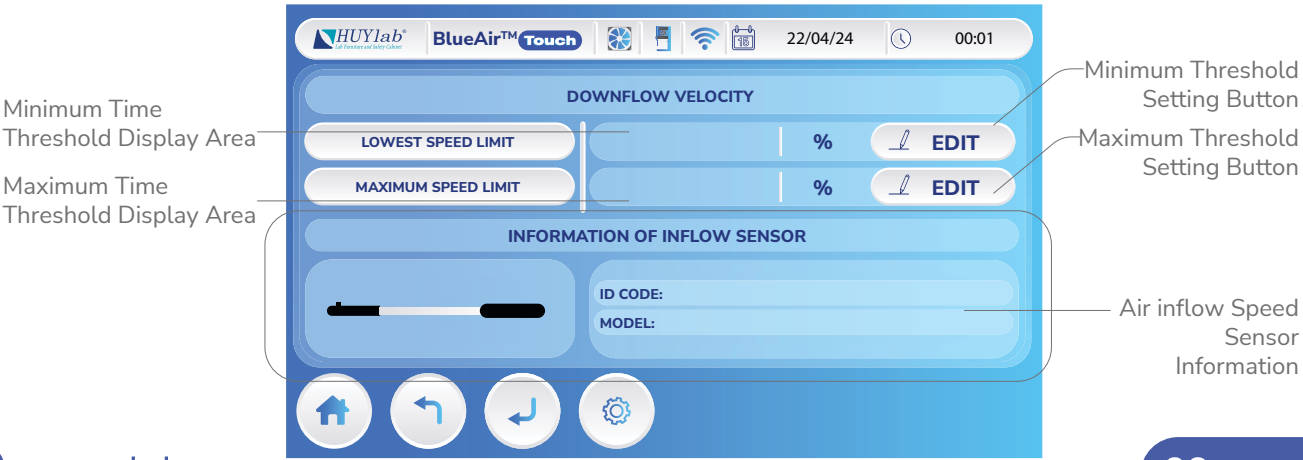

2.3.4. SET DATE AND TIME FOR THE DEVICE

Step 1: In the system settings interface, press " TIME " to enter the date and time settings page (according to actual time) for the device.

Step 2: On the date and time setting page, press "SET" in turn for each Hour, Minute, Day, Month, Year item to display the keyboard page to set the time for the cabinet.

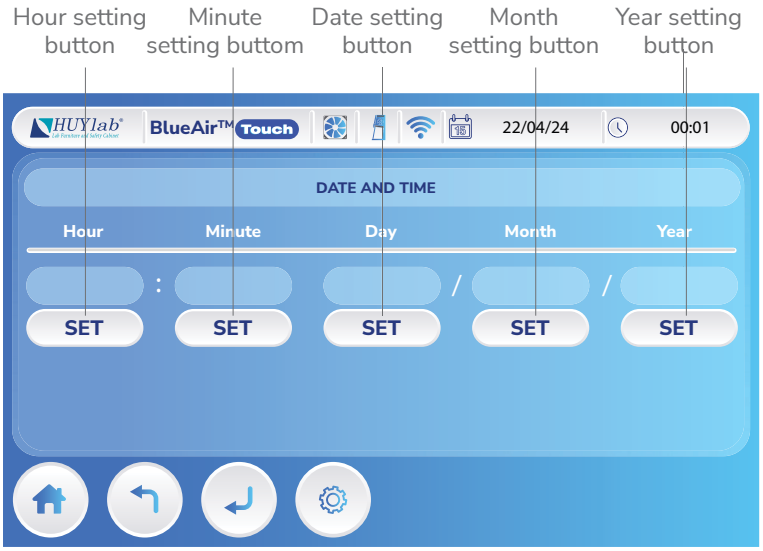

2.3.5. WIND SPEED SENSOR CALIBRATION

Step 1: In the system settings interface, click **"CALIBRATION"** to enter the inlet/outlet wind speed sensor calibration page.

Step 2: At the sensor calibration page, press the **"SET"** buttons to select the output wind speed or inlet wind speed sensor calibration.

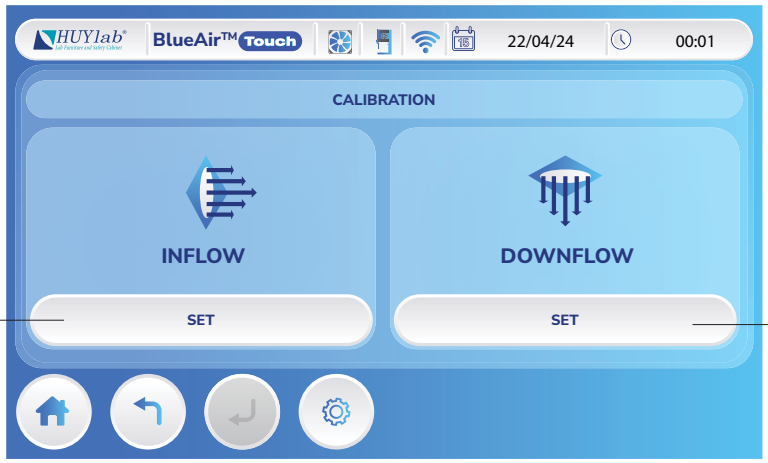

Inflow Speed Sensor Calibration Button

Downflow Speed Sensor Calibration Button

Step 3: Calibrate the wind speed sensor:

- In the wind speed sensor calibration page, press “EDIT” and enter the calibration value (measured from the standard measuring device). Press “ENTER” to confirm the entered value.

- After entering the value, press “CALIB” to let the cabinet calculate and give the appropriate calibration coefficient to bring the actual sensor value back to the standard value. (Note: Do not press the “CALIB” button continuously during the calibration process to avoid errors, the calibration process may take 3-5 seconds.)

- The calibration process is complete when the actual value display area of the sensor displays the value that the user has calibrated.

2.3.6. VIEW OTHER INFORMATION

Users can view other information about the filter, white light and device information by pressing the **“HEPA”, “LIGHT”** and **“INFORMATION”** buttons respectively in the system setting interface.

2.3.7 INSTRUCTIONS FOR TURNING OFF THE CABINET

In the system settings interface, press “ SHUT DOWN ” to turn off the cabinet. Then, unplug the cabinet from the power outlet to ensure safety.

3. CLEANING AND MAINTENANCE OF EQUIPMENT

3.1. CLEANING

Step 1: Remove samples, equipment, and supplies from the cabinet.

Step 2: Clean the cabinet surface with a soft cloth and cleaning solution (usually 70° alcohol)

Step 3: Turn off the fan, close the cabinet door and turn on the UV light to disinfect after using the cabinet.

Step 4: After the UV light turns off, turn off the cabinet and unplug the power supply to the cabinet.

Step 5: Clean and wipe the cabinet shell with a soft cloth soaked in cleaning solution (on a regular schedule).

Note:

- The following cleaning and disinfecting chemicals should be used:
- Acid and halogen free detergent.
- 70% alcohol solution.
- Do not use cleaning agents that are not suitable or contain acids, chlorine, or substances that corrode steel.
- Use a soft cloth and cleaning solution, avoid spraying or pouring cleaning agents directly onto the surface of the device.

3.2. PERIODIC EQUIPMENT MAINTENANCE AND INSPECTION

- Maintain the device at least every 6 months or more often if the device is used with high frequency.
- Maintenance steps should be performed by a person with specialized knowledge of electrical and cabinet engineering.

4. SOME COMMON ERRORS WHEN USING AND SOLUTIONS

Error / warning	Possible causes	Fix
Main screen display UV	The UV lamp is not turned on properly.	Close the door to completely turn off the alarm. If you need cầu sử dụng đèn UV cần thực hiện bật lại đèn thông qua nút UV
The main screen displays	The door is not opened or closed properly.	Method 1: Press and hold the icon to temporarily turn off the alarm if the door position used does not match the marked position. (Note: the alarm will automatically re-alert every 5 minutes) Method 2: Close or open the door at the marked position.
The inflow speed or downflow speed sensor value turns red. 1.0	The airflow speed inside the cabinet is outside the set range.	Method 1: Tap the icon 1.0 to temporarily disable the warning. (This method only silences the alert; the speed values remain outside the set threshold.) Method 2: Reconfigure the threshold values for the sensor triggering the warning. Method 3: Adjust the fan level settings to align the airflow speed with the preset threshold values.

Warning "THE FAN HAS EXCEEDED ITS USAGE TIME"	The fan's shelf life has expired according to the manufacturer's recommendations.	Press the confirm button to turn off the warning temporarily and contact the company's customer service department for support.
Warning "THE FILTER HAS EXCEEDED ITS USAGE TIME"	Filter life has expired according to manufacturer's recommendation	
Warning "THE LIGHT HAS EXCEEDED ITS USAGE TIME"	The white light has expired according to the manufacturer's recommendation.	
Warning "THE UV LIGHT HAS EXCEEDED ITS USAGE TIME"	The UV lamp usage time has expired according to the manufacturer's recommendation.	
Warning "THE LIGHT HAVE NOT BEEN TURNED OFF"	The white light was not turned off before pressing the button SHUT DOWN	Press the confirm button to turn off the warning temporarily and contact the company's customer service department for support.
Warning "THE FAN HAVE NOT BEEN TURNED OFF"	The fan was not turned off before pressing the button SHUT DOWN	
Warning "THE UV LIGHT HAVE NOT BEEN TURNED OFF"	The UV light was not turned off before pressing the button SHUT DOWN	
Warning "LIGHT AND FAN ARE NOT TURNED OFF"	The white light and fan were not turned off before pressing the SHUT DOWN	

5. SOME ACCESSORIES INCLUDED / COMPATIBLE WITH THE DEVICE

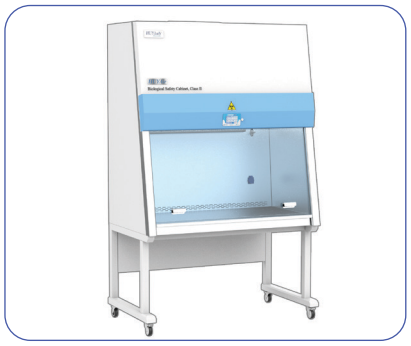

Support stand	Mobile Frame Stand with Wheels, Designed for Model
	Mobile Frame Stand with Wheels, Designed for Model
Power Accessories	Power Outlet
Power Accessories	Gas valve | N2 | Vacuum
	Water valve
Filter Accessories	Filter ULPA (H15)

6. CONTACT TECHNICAL SUPPORT

If you need technical support or have any questions regarding the product, please contact us using the information below:

LABone Scientific Equipment Co., Ltd.
Address: No. 228/13/3 Nguyen Thi Lang Street, Phu Loi Hamlet, Cu Chi Commune, Ho Chi Minh City, Vietnam
Hotline: 0978 782 147
Email: info@labone.vn
Website: www.labone.vn

We are committed to providing the best customer support, including instruction on how to use, maintain equipment, and handle technical issues that arise. Our team of technicians are highly trained and ready to help you in any situation.

Equipment warranty policy:

- All our products are warranted for 3 years from the date of purchase.
- During the warranty period, you will enjoy free repair and replacement services if the product has technical errors due to the manufacturer.
- For more details on warranty policy and applicable conditions, you can visit the web-site or contact us directly via hotline or email.

We hope that LABone's dedication and professionalism in technical support services will bring absolute satisfaction to our customers. We sincerely thank you for trusting and using our products.

7. TECHNICAL DRAWINGS OF THE EQUIPMENT

7.1. CIRCUIT DIAGRAM

STT	Name	Part Number
1	IEC Power jack with Fuse Holder	AC-02
2	EMI Filter	CW1B-10A-L
3	Terminal Block 2 Pins	HB9500-2
4	Fuse Holders	BLX-A
5	AC-DC Coverter	HLK-10PM12
6	Terminal Block Plug-in 2 Pins	KF-5.08-2-V
7	XH 2.54mm 4-Pin	
8	XH 2.54mm 2-Pin	
9	XH 2.54mm 3-Pin	
10	ESP32 Microcotroller	ESP32-S3-WROOM -1-N4
11	Triac 600V 16A	ACST1035-7FP
12	Relay 5V 5A	G5NB-1A-E-5VDC
13	Buzzer	1209
14	Terminal Block 10 Pins	HB9500-10
15	4,3 inches HMI LCD Display	DMG80480C043_02 WTC
16	Power Button 12V	
17	Air Flow Sensor	HM-AM1000
18	Door Sensor	SM-205
19	AC Motor with Capacitor	R3G225-RE0718
20	Ballast	PHILIPS EB-CI TL-D 18-36W
21	UV Tube	TUV T8
22	Led Tube	T5 BN068C

Number	Description	Number	Description	Number	Description
BUS1 (POWER)		BUS5 (DOOR SENSOR)		BUS8 (HMI)	
1	Line (L)	10	Door 1	19	VCC (+5V)
2	Neutral (N)	11	Door 2	20	Transmit (TX2)
3	Protective Earth (PE)	12	Ground (GND)	21	Receive (RX2)
BUS2 (LIGHT)		BUS6 (INFLOW SENSOR)		22	Ground (GND)
4	Line (L)	13	+12V	BUS9 (POWER BUTTON)	
5	Neutral (N)	14	Analog Signal	23	Button LED Power (LED)
BUS3 (UV)		15	Ground (GND)	24	Ground (GND)
6	Line (L)	BUS7 (DOWNFLOW SENSOR)		25	VCC (+5V)
7	Neutral (N)	16	+12V	26	Power Enable (EN)
BUS4 (MOTOR)		17	Analog Signal		
8	Line (L)	18	Ground (GND)		
9	Neutral (N)				

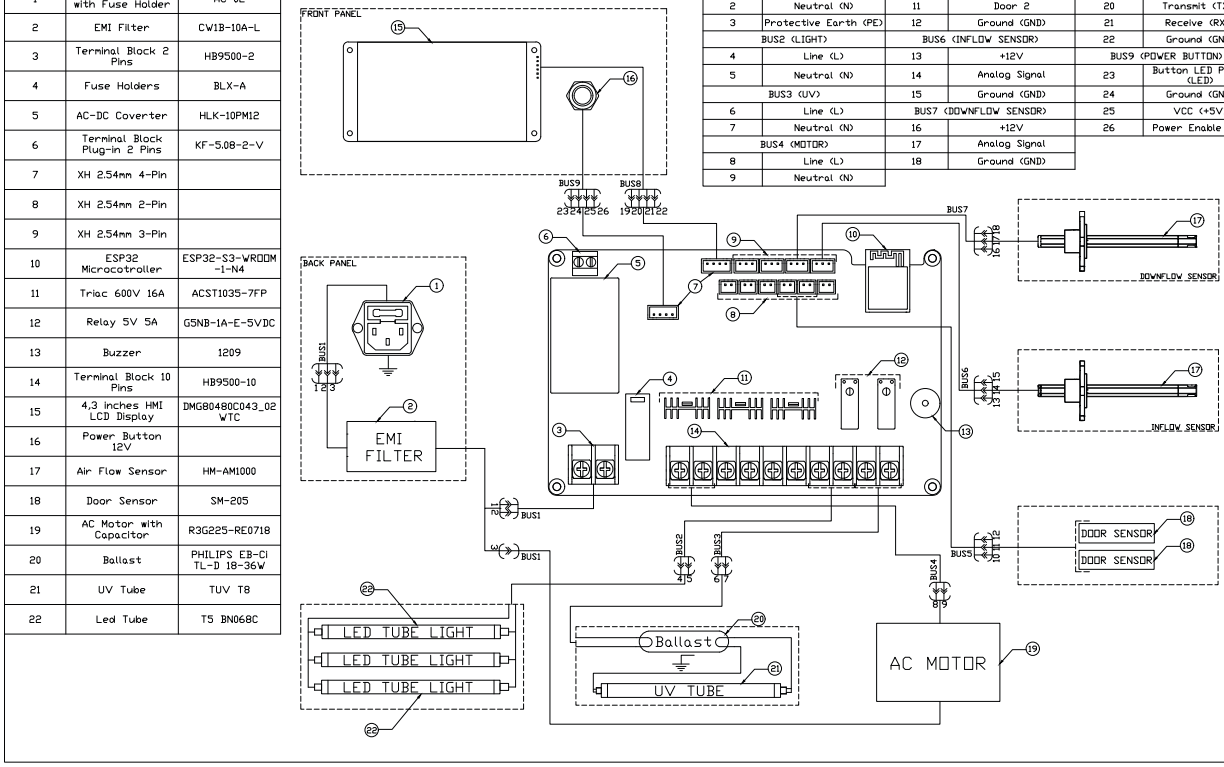

7.2 MECHANICAL EQUIPMENT DRAWINGS

NO.	DESCRIPTION	QTY	NO.	DESCRIPTION	QTY
1	Cabinet body	1	27	Counterweight	2
2	Supply filter	1	28	LED lamp housing	1
3	Air chamber	1	29	Control display	1
4	Fan	1	30	Top cover	1
5	Exhaust filter	1	31	Left side panel	1
6	Filter clamping mechanism	1	32	Right side panel	1
7	Fan tray	1	33	Control box	1
8	Upper filter cover	1	34	UV lamp	1
9	Front panel	2	35	Air hole cover	1
10	Rear panel	2	37	Sensor	3
11	Mesh panel	1			
12	Work surface support frame	4			
13	Work surface 01	1			
14	Work surface 02	1			
16	UV lamp holder	1			
17	Glass window	1			
18	Left glass rail	1			
19	Right glass rail	1			
20	Left plastic rail	1			
21	Right plastic rail	1			
22	Left cover	1			
23	Right cover	1			
24	Cover connecting bar	1			
25	Belt	2			
26	Counterweight rail	1			

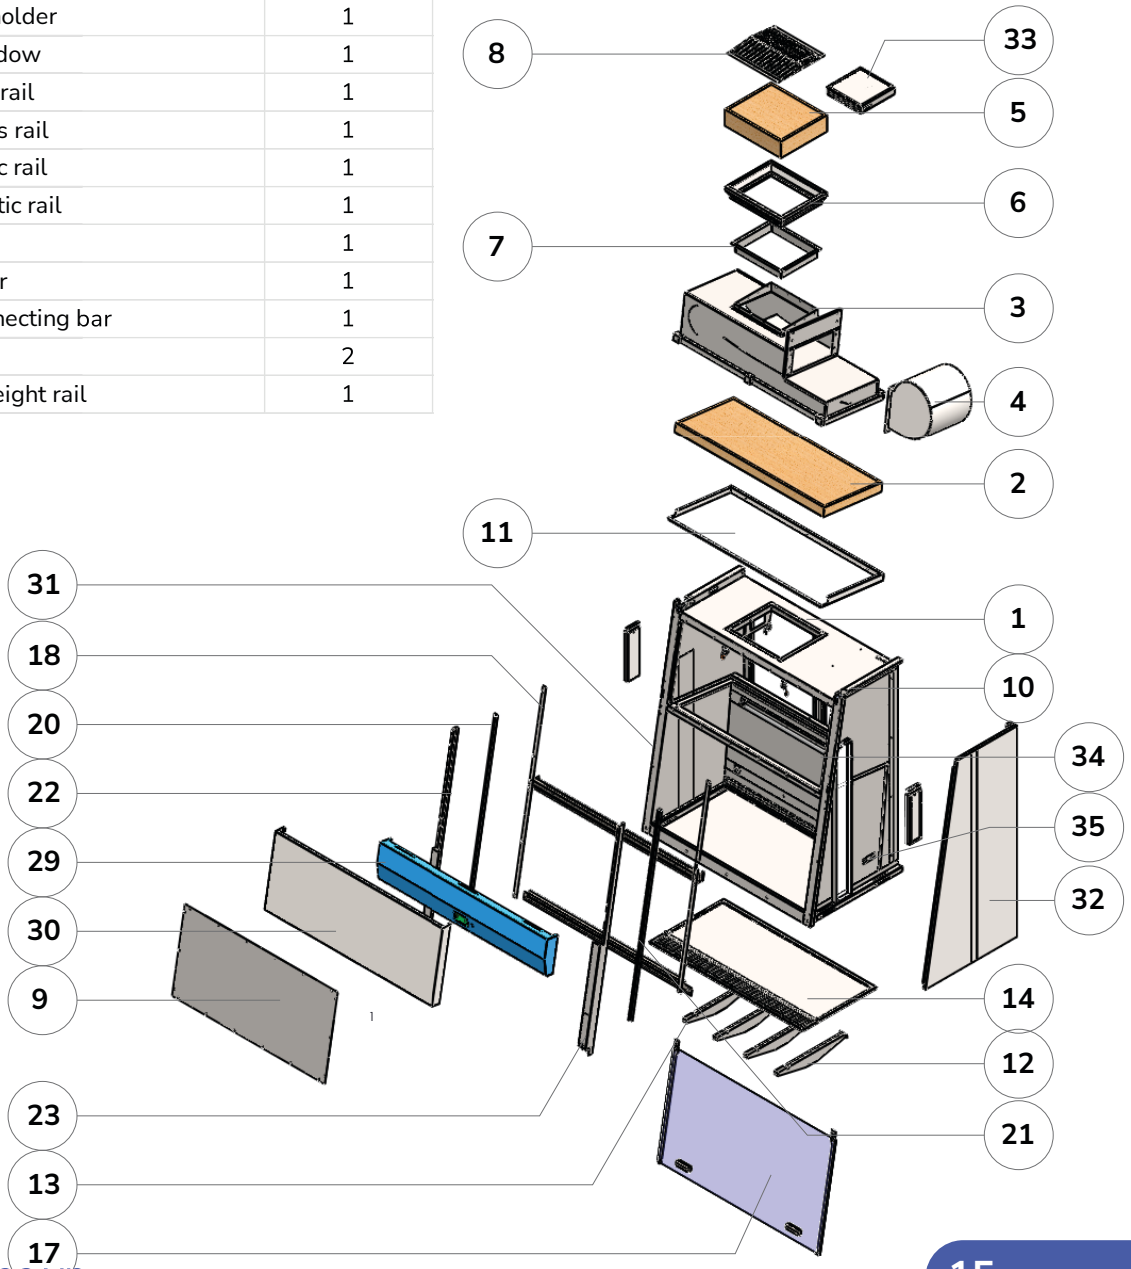

HUYlab
USER MANUAL

LABone Scientific Equipment Co.Ltd.,

Address: No. 228/13/3 Nguyen Thi Lang Street, Phu Loi Hamlet, Cu Chi Commune, Ho Chi Minh City, Vietnam
Phone: 028 6260 2798 | Hotline: 0978 782 147 | Email: info@labone.vn

HUYlab is brand of LABone